

Step 1:
Push in label roll, label side facing up




Step 2:
Slide along base plate catches until the base plate drops open




Step 3:
Pull out approx. 200mm of the label roll and feed straight through the tool



Step 4:
Close base plate, squeeze handle and hold

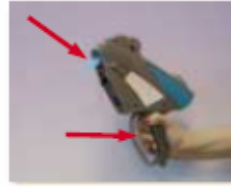

Step 5:
Feed labels through transport unit, until labels appear at the other side of the unit

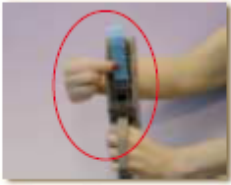

Step 6:
Squeeze handle lever repeatedly to tighten labels



Step 7:
To change print characters, slide out the dial shaft, select changes, slide the dial shaft back into place

